
Fault tree analysis

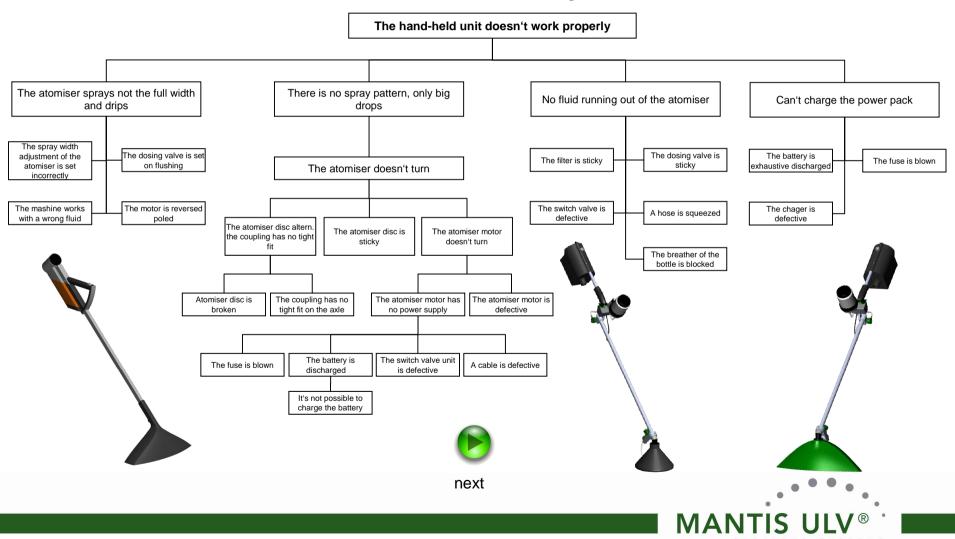



The hand-held unit doesn't work properly





The atomiser sprays not the full width and dripps



There is no spray pattern, only big drops



No fluid is running out of the atomiser



Can't charge the power pack



next




next







There is no spray pattern, only big drops

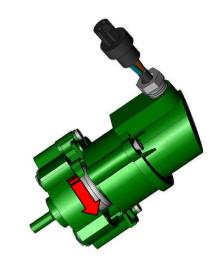


The atomiser disc doesn't turn





The atomiser doesn't turn

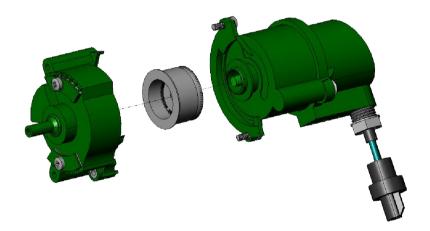

The atomiser disc altern. the coupling has no tight fit

The atomiser disc is sticky

The atomiser motor doesn't turn




next







The atomiser disc altern. the coupling has no tight fit

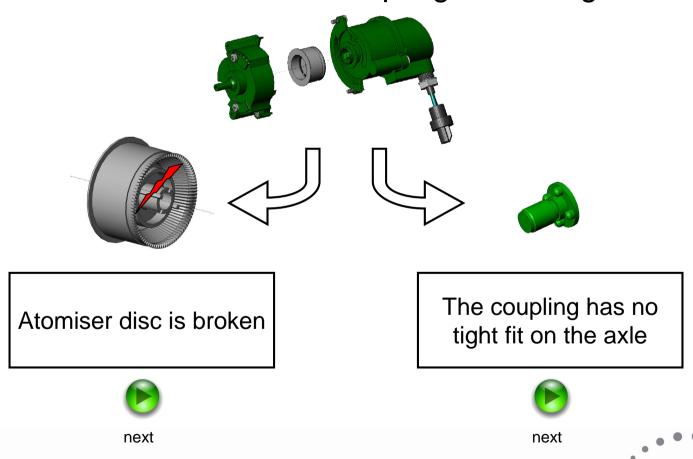

Atomiser disc is broken



In this case the broken atomiser disc has to be replaced





The coupling has no tight fit on the axle




In this case the atomiser has to be send in for repair





The atomiser disc is sticky

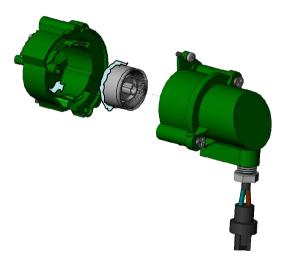


In this case the segment-module has to be removed and cleaned with warm water also the atomiser disc





The atomiser motor doesn't turn

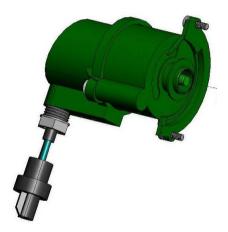

The atomiser motor has no power supply




next

The atomiser motor is defective





The atomiser motor is defective

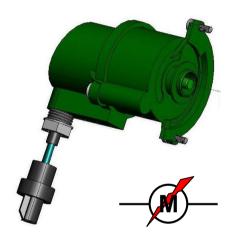

In this case the motor-module has to be replaced





The atomiser motor has no power supply











The fuse is blown

The battery is discharged

The switch valve unit is defective

A cable is defective









next

next



The fuse is blown



In this case the fuse has to be replaced





The battery is discharged



In this case the power pack has to be charged with the provided automatic-charger. If it's not possible a cable or the battery is defective.





It's not possible to charge the battery



Information

The battery is full charged if the charger LED lights green. The charged battery has a voltage of 6V.

If it's not possible to charge the battery to the normal level is has to be replaced





The switch valve unit is defective



If it's not possible to switch current the switch valve unit has to be replaced





A cable is defective



To find a broken wire all cables has to be checked for continuity.


Broken cables have to be replaced





No fluid running out of the atomiser



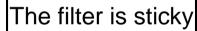




next





 The breather of the bottle is blocked





A hose is squeezed



next




The switch valve

is defective





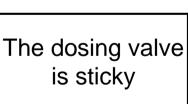





The filter is sticky



This filter is used in units before 2009

If there is back pressure in the filter it has to be cleaned with warm water





The dosing valve is sticky



Remove the dial plate and loosen the screws beneath.

Clean all parts with warm water.





The switch valve is defective



If it's not possible to switch the flow of liquid the switch-valve unit has to be replaced.





A hose is squeezed





Please check if there is any hose which is squeezed. It might cause backwater.







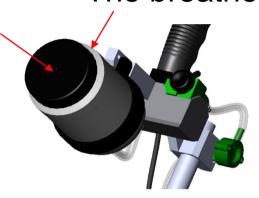

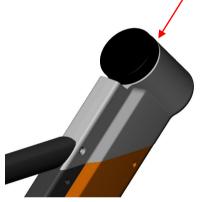

Clean bottle and lit with warm water. If you got a MINI MANTRA the breather hole can be in the lit or in the thread of the bottle. The MANKAR HQ also got a hole in the thread of the reservoir or a new developed lit with air vent





The atomiser sprays not the full width and dripps











The spray width adjustment of the atomiser is set incorrectly

The dosing valve is set on flushing

The mashine works with a wrong fluid

The motor is reversed poled









next

next



The spray adjustment of the atomiser is set incorrectly



If the spray width adjustment of the atomiser is set to the minimum and the setting of the dosing valve is to high the atomiser starts dripping.





The dosing valve is set on flushing



If the dosing valve has the flush setting it is not possible for the atomiser to spray evenly because of an overflow.





The mashine works with a wrong fluid




If a fluid with a very low viscosity is used the function is limited and the atomiser starts dripping.





The motor is reversed poled

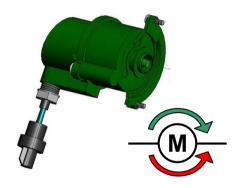

If the atomiser disc turns counter-clockwise it starts dripping. The polarity of the power supply has to be checked.





Can't charge the power pack



The battery is exhaustive discharged

The fuse is blown

The charger is defective



next







The fuse is blown



In this case the fuse has to be replaced





The battery is exhaustive discharged

Information

If the voltage of the battery is below 4,5V the charger doesn't detect the battery automaticly and can't charge it.



Information


The battery is full charged if the charger LED lights green. The charged battery has a voltage of 6V.

If it's not possible to charge the battery to the normal level is has to be replaced





The charger is defective

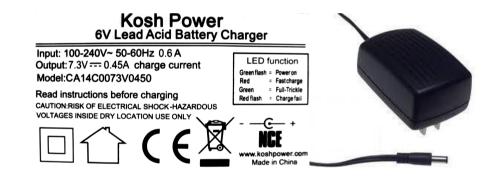

In this case the charger has to be replaced



