

# OPERATING INSTRUCTIONS

## MANKAR



Modelle: MANKAR-P 30-50 Flex, MANKAR-P 50  
MANKAR-P 60-80, MANKAR-P 70-110  
MANKAR-GP 60-80 , MANKAR-GP 70-110

**ULV- Applicator for weed control  
in areas of specialised cultivation such as nurseries, orchards and  
vineyards, ornamental plant and vegetable gardens, as well as  
agricultural, forestry, communal and non-cultivated lands.**

**The unit has been developed for the *undiluted*  
application of ROUNDUP® products (Glyphosate).**

### **Important:**

Before application, carefully read the usage instructions for the unit and the plant protective agent!  
Observe safety instructions!  
For questions regarding plant protective agents, consult the manufacturer!  
Observe the requirements and regional regulations for the use of herbicides and, if necessary,  
obtain approval from the responsible authorities (e.g. environmental conservation agency)!  
Application is to be performed only by a competent user.

### **Remarks about usage of the unit:**

**Settings:** This system is not suitable for the application of water.

Use herbicides for testing the spray action and calibration of the flow rate.

**Usage:** Position the spray hood directly above the ground –  
if the spray hood is held too high, the danger of spray driftage exists.

**Cleaning:** Do not clean the unit with a high-pressure spray or an intense water jet spray.



**Noise emission from the unit equates to less than 70 dB(A).**

Manufacturer:

**Mantis ULV-Sprühgeräte GmbH**

Germany 21502 Geesthacht, Vierlander Str. 11 a

Telephone +49(0)4152-8459-0, FAX +49(0)4152-8459-11

Web: [www.mantis-ulv.eu](http://www.mantis-ulv.eu) Email: [mantis@mantis-ulv.eu](mailto:mantis@mantis-ulv.eu)

# MANKAR

## For the undiluted application of Roundup® products (Glyphosate)

The instructions on this page are valid for all MANKAR applicator units. Details regarding assembly, use and replacement parts are provided on the following pages:

MANKAR-P 30-50 FLEX,	MANKAR-P 50:	Pages 4-5
MANKAR-P 60-80,	MANKAR-P 70-110:	Pages 6-7
MANKAR-GP 60-80,	MANKAR-GP 70-110:	Pages 8-9

### Intended usage:

**Weed control in areas of specialised cultivation such as nurseries, orchards and vineyards, ornamental plant and vegetable gardens, as well as agricultural, forestry, communal and non-cultivated lands.**

**Before application, carefully read the usage instructions for the applicator unit and pesticides.**

**Observe safety instructions.**

**For questions regarding pesticides, consult the manufacturer!**

**Observe the requirements and regional regulations for the use of herbicides.**

Noise emission from the unit equates to less than 70 dB (A).

### Protective measures

Observe the remarks in the pesticide usage instructions regarding user safety and wear recommended body protection. Wear protective gloves when filling the chemical substance.

Do not eat, smoke or drink while working with pesticides.

Avoid chemical spillage without fail. Thoroughly clean hands and face after completion of work.

Thoroughly clean and dry the unit immediately following its usage. Never use the mouth to blow out nozzles or other small parts!



**Keep pesticide applicators and chemical substances away from children.**

### Assembly and preparation for initial application

Unit assembly is described for the individual models.

Prior to initial deployment of the applicator unit, charge the battery for at least 16 hours.

Attention! Follow the sequence without fail:

1. Depress the switch in the powerpack; the lamp illuminates.
2. Insert the plug jack into the charger socket.
3. Insert the charging unit into the 110-230 volt power outlet.

The battery has reached its full voltage capacity after approx. 16 hours charging time. When the charging process is complete, first unplug the charging unit from the 230 volt power outlet, and then remove the applicator unit plug from the charger socket.

Spray duration when operating one segmental atomiser  
with one 6 V-7 Ah battery approx. 16 hours

Spray duration when operating two segmental atomisers  
with one 6 V-7 Ah battery approx. 8 hours

A powerpack with two batteries can be installed in order to double the unit's operating duration.

Art. No.: 100467

It must be noted that, with this powerpack option, the required charging time will also double.

The spray width should subsequently be checked - ideally with a piece of cardboard laid out on the ground - and the flow rate adjusted (see below for details).

The battery should be recharged immediately after using the applicator unit.

### General remarks regarding applicator unit function and deployment

**Pesticides:** This applicator unit was originally designed for the undiluted application of Roundup products (Glyphosate). Practical experience has shown, however, that other herbicides can also be deployed in conjunction with this technology. Considering the many products on the market with their differing formulations, it is not possible to provide a complete list with application rate recommendations. Specifications for adjusting the unit listed on the following pages relate to the usage of Roundup UltraMax (Glyphosate 450 gr/ltr). In general, all products with a comparable viscosity are suitable. If it is intended to use a product other than Roundup UltraMax, its application should be first tested over a small area on a trial basis. Usage instructions for the chosen herbicide should be observed in every case, along with local requirements.


**Applicator unit function:** Segmental atomisers are driven by means of a rechargeable battery. Metering on all the units mentioned is path-dependent and takes place by means of a wheel driven pump. Droplets are formed by the centrifugal force of the rotating atomiser. The droplets are discharged downwards by the segmental atomiser through a continuously variable, adjustable segment. Residual chemical in the tank not intended for application is approx. 50 ml. This residual fluid can be refilled back into the original herbicide container.

**Checking applicator unit function:** Chemical solutions may flow quicker or slower due to temperature fluctuations, for which reason the flow rates in the metering table should be checked and corrected as necessary. This system is not suitable for the application of water. Please use herbicides at all times for testing the spray process and calibrating the flow rate. Check the rotating atomiser on a daily basis for cleanliness and free turning motion. Check the output volume from time to time throughout the season.

**Deployment of the applicator unit:** Adjust the height of the spray hood in such a manner that it is as close to the ground as possible - if it is set too high, the risk of spray driftage exists. During operation, chemical fluid will collect in the segmental atomiser reservoir and will continue to drip for approx. 30 seconds after the shut-off valve has been closed if the unit is tilted. In order to avoid damage to cultivated plants due to dripping, we recommend closing the shut-off valve at the end of a row, for example, then folding the spray hood upwards and waiting approx. 30 seconds until the reservoir has emptied.

**Spray width**

- Place an underlay (cardboard or paper) on the ground and prop up the unit on stands.
- Actuate the switch button on the powerpack while simultaneously turning the wheel and appraising the spray width obtained, initially at one location. The spray width must be set in such a manner that the droplets are discharged over the entire width of the spray hood. The optimal spray width under standard operating conditions is set by the manufacturer.
- Compensate for deviations is possible by loosening screw (F) and sliding the width adjustment on the atomiser (see drawing).
- Further details regarding operating width adjustment can be found on the respective pages for the individual applicator units.

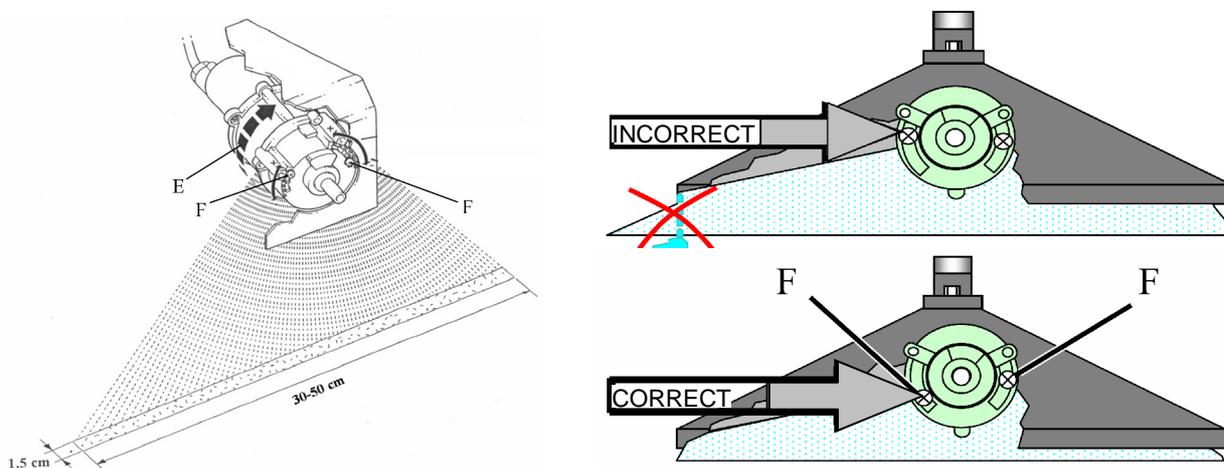

**Cleaning**

**Do not clean the applicator unit with a high-pressure sprayer or with an intense water jet spray.**

**Cleaning during the season:** During short work breaks (a few hours), herbicide can remain in the system as long as the shut-off valve remains closed. After work completion: before cleaning, refill the chemical solution into its original container. Open the shut-off and set the metering pump to maximum. Fill the chemical tank halfway with water, then, with the unit positioned, turn the wheel smoothly 50 x and allow the fluid to drain into a collector tank or, operating the unit for approx. 100 m, apply the cleaning fluid to the already treated surface. Remove any remaining water from the tank and turn the wheel 50 x once again until the system is completely empty.



**Cleaning at the end of the season:** Rinse the unit with warm water as described above. Additionally: Unscrew filter and clean screen as necessary. The spray hood and the atomiser housing can be cleaned with a moist cloth, except the atomiser disc in order to avoid damage. With heavy contamination, the atomiser housing should be unscrewed to remove contaminants and plant parts. Connect the unit to the charging device (see below).


**Charging the applicator unit and care of the accumulator**

The applicator unit is outfitted with an automatic charging device. Trickle charging is possible. In order to recharge a completely empty battery up to full capacity, approx. 16 hours charging time is required. The battery should be recharged immediately after usage.

Battery charging	Minimum charging time	Time interval
Fully discharged	16 hrs.	immediately
Short-term usage	6 hrs.	immediately
Storage without usage	( 2 hrs. 1 x per month )	<b>or permanent charge</b>

With a fully loaded battery, units with one atomiser can be deployed for 16 hours, while units with 2 atomisers can be deployed for approx. 8 hours.

MANKAR-P 30-50 FLEX  
MANKAR-P 50

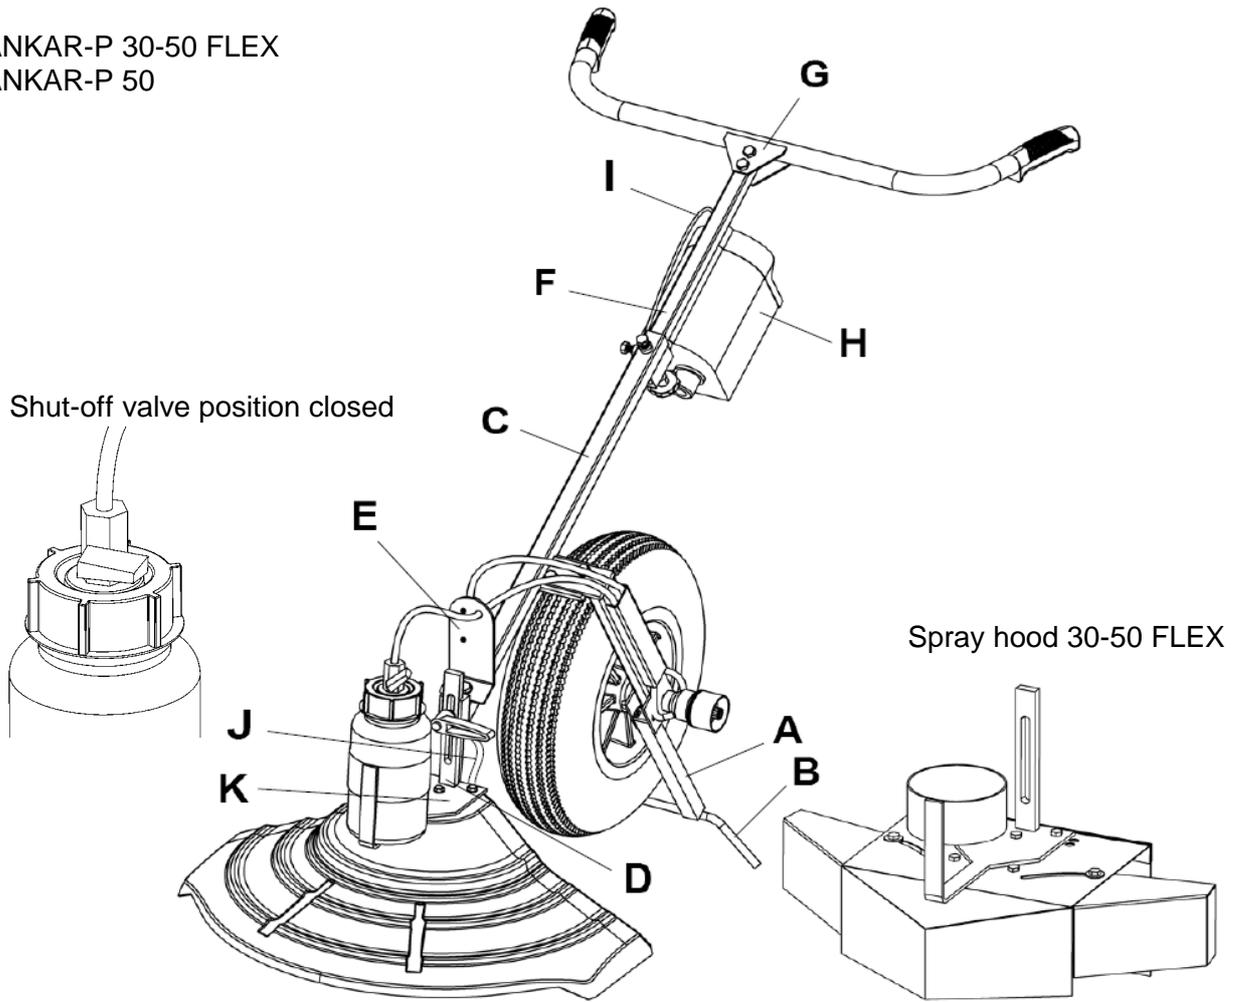

**Assembly**

1. Screw the applicator unit support stand (A) together with the stand foot (B).
2. Screw the spray hood together with the height adjustment (K) and the unit support beam (C).
3. Connect the electrical plug connectors (D) together.
4. Screw the flow rate control (E) onto the unit support beam (C).
5. Screw the handle bar (G) together with the handle bar extension (F)
6. Insert the handle bar extension (F) into the unit support beam (C) and tighten securely.
7. Slide the powerpack (H) into the designated bracket on the unit support beam (C) and tighten securely.
8. Insert the phone jack (I) into the plug socket on the powerpack (H).
9. Attach the hose (J) onto the lower side of the flow rate control (E).

**Metering table**


**Roundup UltraMax application rate at 20 °C**

Roundup UltraMax	Metering adjustment knob position	Required output volume in ml per atomiser with 50 wheel revolutions
2 l/ha	E	approx. 6.3
3 l/ha	H	approx. 9.5

**Checking the output volume**

1. Place an underlay (e.g. cardboard or paper) on the ground and prop up the unit on stands.
2. Fill the chemical tank with herbicide - undiluted.
3. Remove the hose from the lower side of the flow rate control and place a measuring cup underneath.
4. Open the shut-off valve, initially setting the metering adjustment knob to the maximum flow rate and simultaneously turning the wheel; wait until the chemical solution is evenly applied.
5. Set the chemical solution volume according to the output table.
6. Volume calibration: Collect the chemical solution from 50 wheel revolutions into a measuring cup. If the desired volume is not reached, set a larger or a smaller volume with the pump metering adjustment knob.
7. Perform volume calibration again.
8. Reconnect the hose on the lower side of the flow rate control.
9. The unit is now ready for deployment.

**Maximum allowable wheel pressure 3.5 bar**

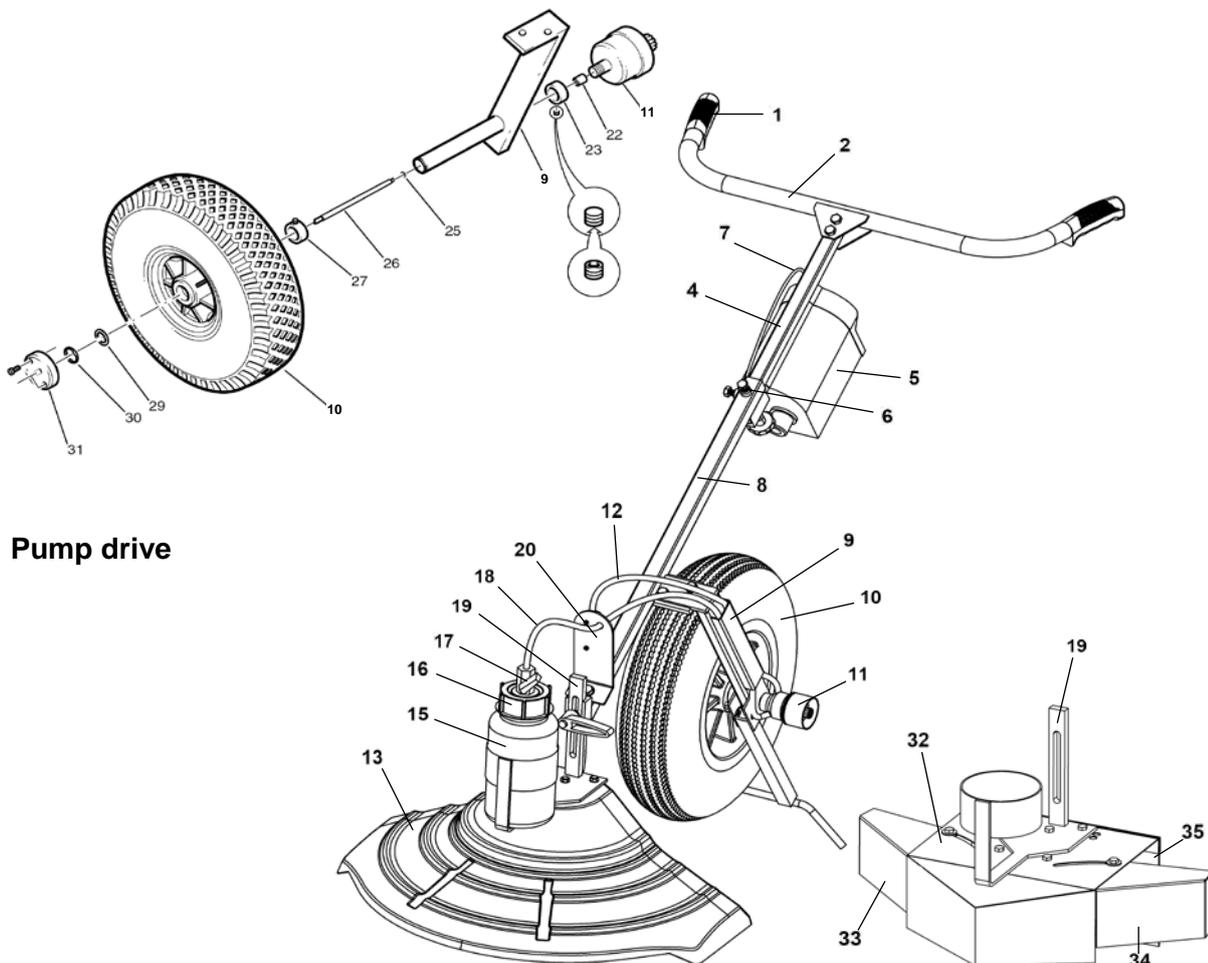

**Pump drive**

**Item Part No. Description <sup>15</sup>**



**102360 MANKAR-P 30-50 FLEX**

**101093 MANKAR-P 50**


1	100349	Rubber hand grip for MANKAR
2	101272	Handle bar for MANKAR
4	101273	Handle bar VA extension for MANKAR-P
5	100459	Powerpack compl. 1 battery 6V-7 Ah, for MANKAR
6	100368	Star grip screw, 8 mm x 25
7	100387	Phone jack with cable, 1050mm MANKAR
8	101274	Unit support beam VA for MANKAR-P and -110P
9	101275	Pump carrier VA incl. stand for MANKAR-P -110P
10	100402	Wheel 400 x 100 mm, pneumatic tyre
11	100492	Metering pump MAFEX-3, capacity 2 - 20 ml/min
12	- - - - -	Pressure hose 4 x 2 mm
13	100351	Spray hood 50 cm wide for MANKAR-P and MANTRA
15	100434	Tank 1 L, MANKAR, without lid
16	100441	Tank lid, 1 L with hole for MANKAR units
17	100390	Ball valve 1/4" i/i
18	- - - - -	Pressure hose 4 x 2 mm
19	101276	Height adjustment for MANKAR-P with tank holder
20	100397	Flow rate controler, complete for MANKAR without holder
22	100392	Pump threaded sleeve for MAFEX / MANKAR pumps
23	100389	Clamping bush for wheel axle/pump
25	100141	O-ring 4,47 x 1,78 mm for pistons, MAFEX/MANKAR pumps
26	100393	Cardan shaft, MS, for MANKAR units
27	100377	Retaining collar 20.5 mm for wheel axle MANKAR and mounted units
29	100457	Adjusting Washer 20x28x1 mm for pump drive
30	100394	Retaining ring A 20 for pump carrier MANKAR / FLEXOMANT
31	101720	Cardan shaft carrier
	100375	Entrainer disk for MANKAR units
32	102248	Spray hood 30-50cm Flex compl. with atomiser and height adjustment, MANKAR-P
33	102327	Spray hood 30-50 cm, right chamber, VA
34	102326	Spray hood 30-50cm, chamber-left
35	102394	Rubber curtain for MANKAR-30-50

MANKAR-P 60-80  
MANKAR-P 70-110

Shut-off valve position closed

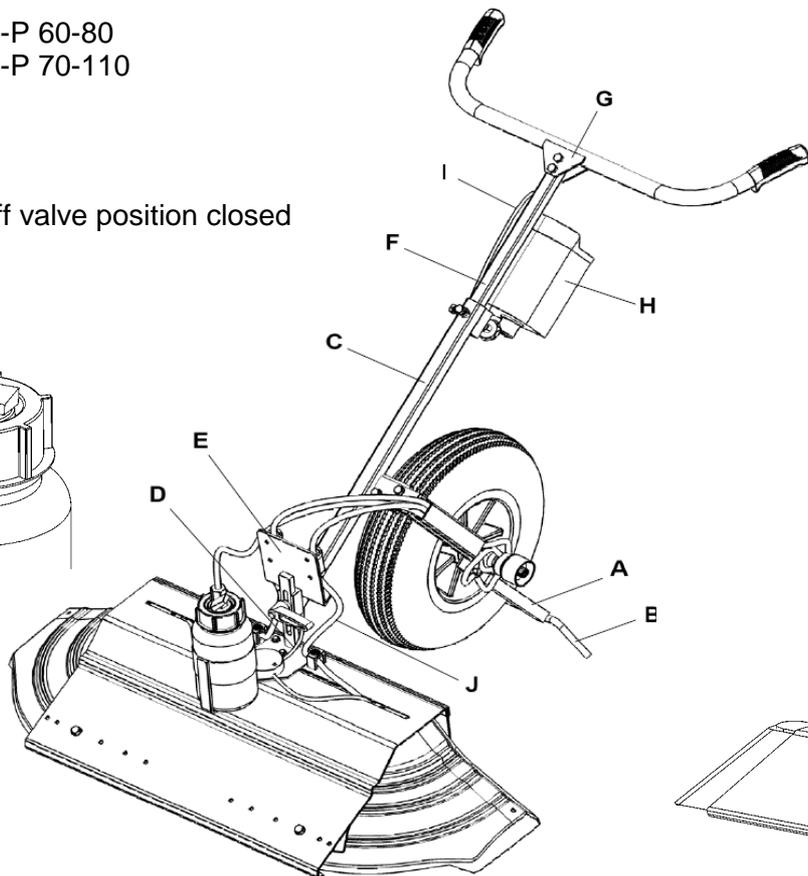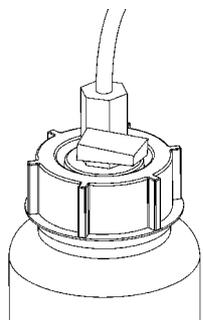

Spray hood 60-80

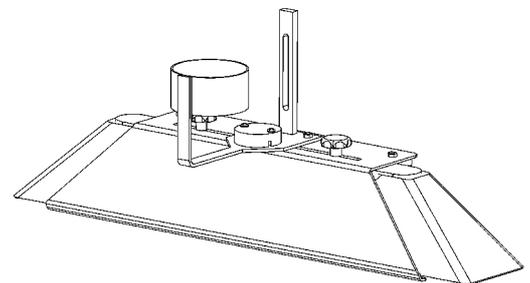

#### Assembly

1. Screw the applicator unit support stand (A) together with the stand foot (B).
2. Screw the spray hood together with the height adjustment (B) and the unit support beam (C).
3. Connect the electrical plug connectors (D) together.
4. Screw the flow rate control (E) onto the unit support beam (C).
5. Screw the handle bar (G) together with the handle bar extension (F)
6. Insert the handle bar extension (F) into the unit support beam (C) and tighten securely.
7. Slide the powerpack (H) into the designated bracket on the unit support beam (C) and tighten securely.
8. Insert the phone jack (I) into the plug socket on the powerpack (H).
9. Attach the hose (J) onto the lower side of the flow rate control (E).

#### Metering table

Roundup UltraMax application rate 2 l/ha at 20 °C

Spray width in cm	Metering adjustment knob position	Required output volume in ml per atomiser with 50 wheel revolutions
60	A	approx. 3.8
70	B	approx. 4.4
80	C	approx. 5.0
90	D	approx. 5.6
100	E	approx. 6.3
110	F	approx. 6.9

Calculating divergent application rates:

Factor x Spray width in cm = Required volume per atomiser in ml with 50 wheel revolutions

Factor for 1 l/ha: 0,031  
Factor for 2 l/ha: 0,063  
Factor for 3 l/ha: 0,094


#### Adjusting the spray width

- a) Loosen the spray hood screws in the elongated holes on the upper side of the sheet metal skirt and unscrew the screws from the front side of the sheet metal skirt.
- b) Adjust the segmental rotation atomiser to the desired width (see page 3 of the Operating Instructions).
- c) Retighten the screws.

#### Checking the output volume

1. Place an underlay (e.g. cardboard or paper) on the ground and prop up the unit on stands.
2. Fill the chemical tank with herbicide - undiluted.
3. Remove the hose from the lower side of the flow rate control and place a measuring cup underneath.
4. Open the shut-off valve, initially setting the metering adjustment knob to the maximum flow rate and simultaneously turning the wheel; wait until the chemical solution is evenly applied.
5. Set the chemical solution volume according to the output table.
6. Volume calibration: Collect the chemical solution from 50 wheel revolutions into a measuring cup. If the desired volume is not reached, set a larger or a smaller volume with the pump metering adjustment knob.
7. Perform volume calibration again.
8. Reconnect the hose on the lower side of the flow rate control.
9. The unit is now ready for deployment.

**Maximum allowable wheel pressure 3.5 bar**

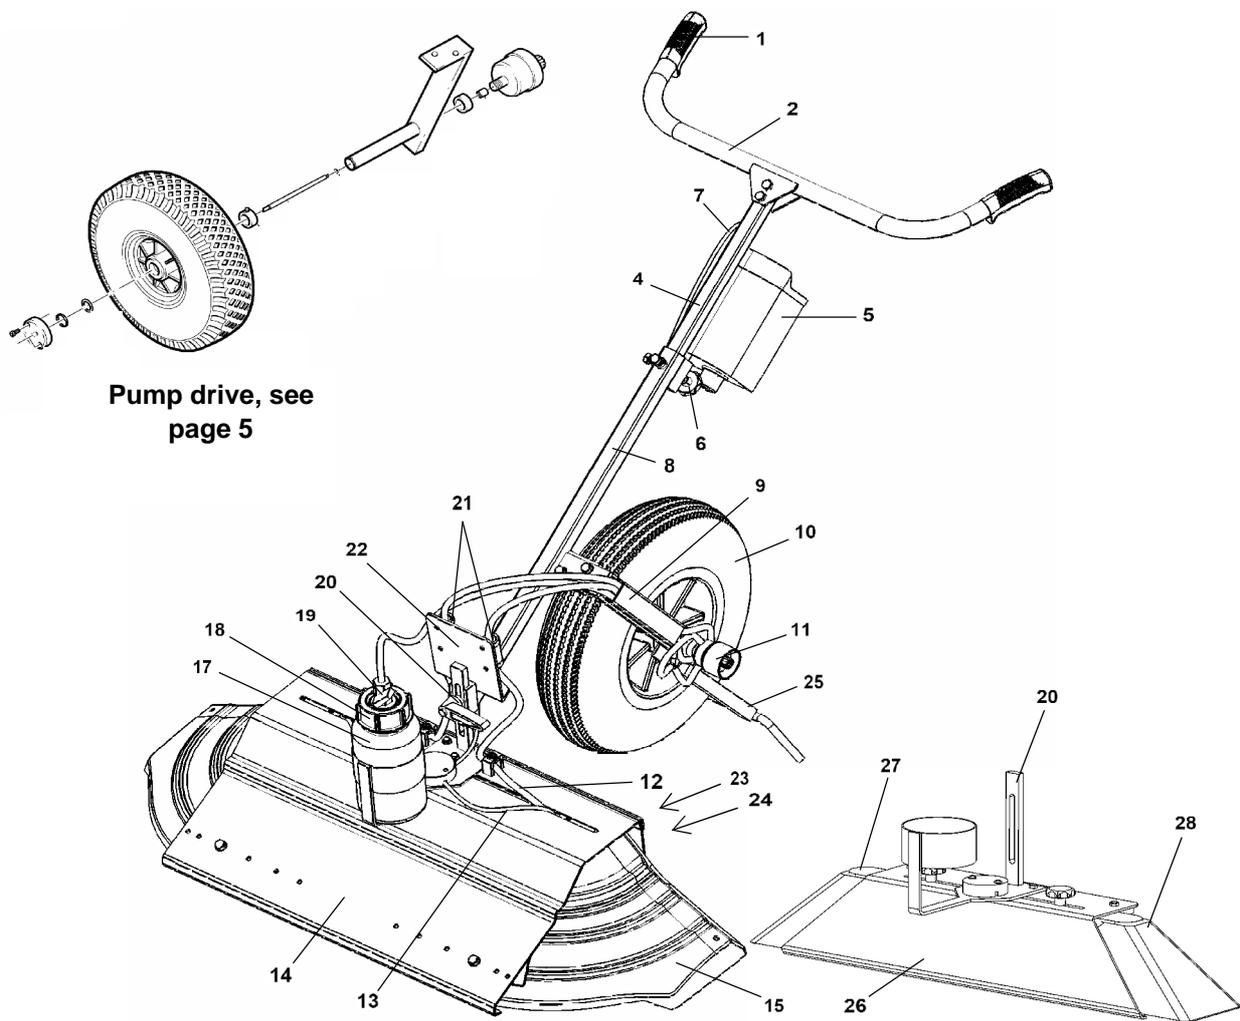

Pump drive, see page 5

**Part Art. No. Designation**



**101094 MANKAR-P 70-110**

**102391 MANKAR-P 60-80**


1	100349	Rubber hand grip for MANKAR
2	101272	Handle bar VA for MANKAR-P VA, -110P VA
4	101273	Handle bar extension VA for MANKAR-P VA, -110P VA
5	100459	Powerpack with 1 battery, 6 V - 7 Ah, for MANKAR-P,-110P
6	100368	Star knob screw M 8 x 25 mm
7	100387	Phone jack with cable, 1050 mm, MANKAR
8	101274	Unit support beam VA for MANKAR-P VA and -110 P VA
9	101275	Pump carrier VA incl. stand for MANKAR-P VA, -110P VA
10	100402	Wheel 400 x 100 mm, pneumatic-tyred
11	100522	Metering pump MANKAR-3, capacity 5 - 10 ml/min
12	- - - - -	Pressure hose 4 x 2 mm
13	100388	Cable, Atomiser cable, Mankar/Flex/Var/Mafex
14	100363	Sheet metal skirt, 600mm for spray hood 70 - 110 cm
15	100400	Spray hood, split, 25 cm wide, left for spray hood 70 - 110 cm
	100426	Spray hood, split, 25 cm wide, right for spray hood 70 - 110 cm
17	100434	Tank 1 L, MANKAR, without lid
18	100441	Tank lid, 1 L with hole for MANKAR units
19	100390	Ball valve 1/4" i/i
20	101276	Height adjustment for MANKAR-P, with tank holder
21	100397	Flow rate controller, complete, for all MANKAR units, without holder
22	100415	bracket for 2 flow rate controllers, MANKAR-110 P
23	100381	Clamping strip for rubber skirt, spray hood 70 - 110 cm, MANKAR
24	100380	Rubber skirt for spray hood MANKAR-110 P, -110 GP
25	100433	Stands for MANKAR units
26	101436	Spray hood 60-80 cm complete for MANKAR P with 2 atomisers, height adjustment with tank holder
27	102551	Spray hood, 30cm with guide rail, left for spray hood 60-80cm
28	102552	Spray hood, 30cm with guide rail, right for spray hood 60-80cm

MANKAR-GP 60-80  
MANKAR-GP 70-110

Shut-off valve position closed

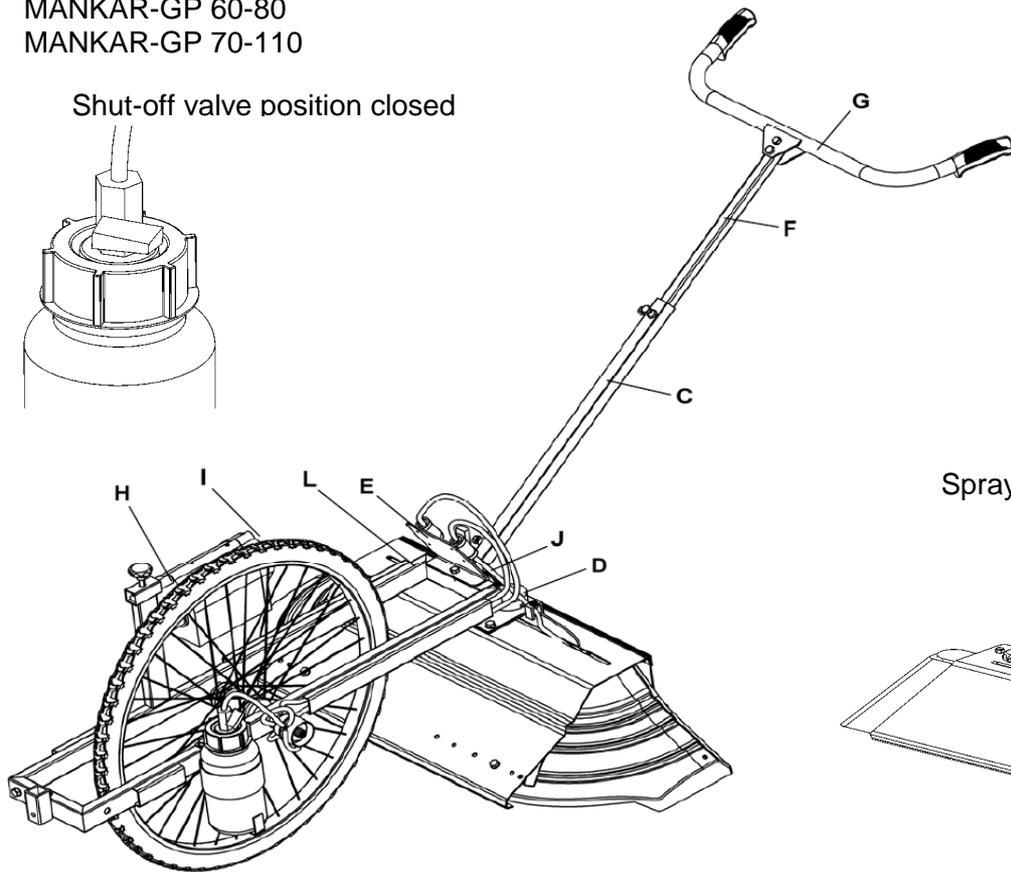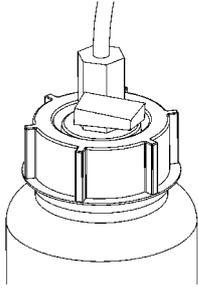

Spray hood GP 60-80

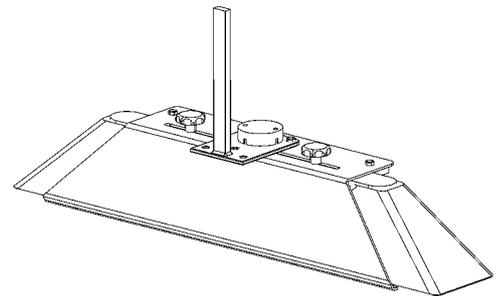

#### Assembly

1. Screw the spray hood together with the height adjustment (K) and the unit support beam (C).
2. Connect the electrical plug connectors (D) together.
3. Screw the flow rate control (E) onto the unit support beam (C).
4. Screw the handle bar (G) together with the handle bar extension (F)
5. Insert the handle bar extension (F) into the unit support beam (C) and tighten securely.
6. Connecting piece (C)
7. Slide the powerpack (H) into the designated bracket on the unit support beam (C) and tighten securely.
8. Insert the phone jack (I) into the plug socket on the powerpack (H).
9. Attach the hose (J) onto the lower side of the flow rate control (E).

#### Metering table

Roundup UltraMax application rate 2 l/ha at 20 °C

Spray width in cm	Metering adjustment knob position	Required output volume in ml per atomiser with 50 wheel revolutions
60	A	approx. 6.1
70	B	approx. 7.0
80	C	approx. 7.9
90	D	approx. 8.8
100	E	approx. 9.7
110	F	approx. 11.0

Calculating divergent application rates:

Factor x Spray width in cm = Required volume per atomiser in ml with 50 wheel revolutions

Factor for 1 l/ha: 0,050

Factor for 2 l/ha: 0,100

Factor for 3 l/ha: 0,150


#### Adjusting the spray width

- a) Loosen the spray hood screws in the elongated holes on the upper side of the sheet metal skirt and unscrew the screws from the front side of the sheet metal skirt.
- b) Adjust the segmental rotation atomiser to the desired width (see page 3 of the Operating Instructions).
- c) Retighten the screws.

#### Checking the output volume

1. Place an underlay (e.g. cardboard or paper) on the ground and prop up the unit on stands.
2. Fill the chemical tank with herbicide - undiluted.
3. Pull out the hoses from underneath the flow rate controls.
4. Open the shut-off valve, initially setting the metering adjustment knob to the maximum flow rate and wait until the chemical solution is evenly emitted.
5. Set the chemical solution volume according to the output table.
6. Volume calibration: Collect the chemical solution from 50 wheel revolutions into a measuring cup. If the desired volume is not reached, set a larger or a smaller volume with the pump metering adjustment knob.
7. Perform volume calibration again.
8. Reconnect the hoses on the lower sides of the flow rate controls.
9. The unit is now ready for deployment.

**Maximum allowable wheel pressure 3,0 bar**

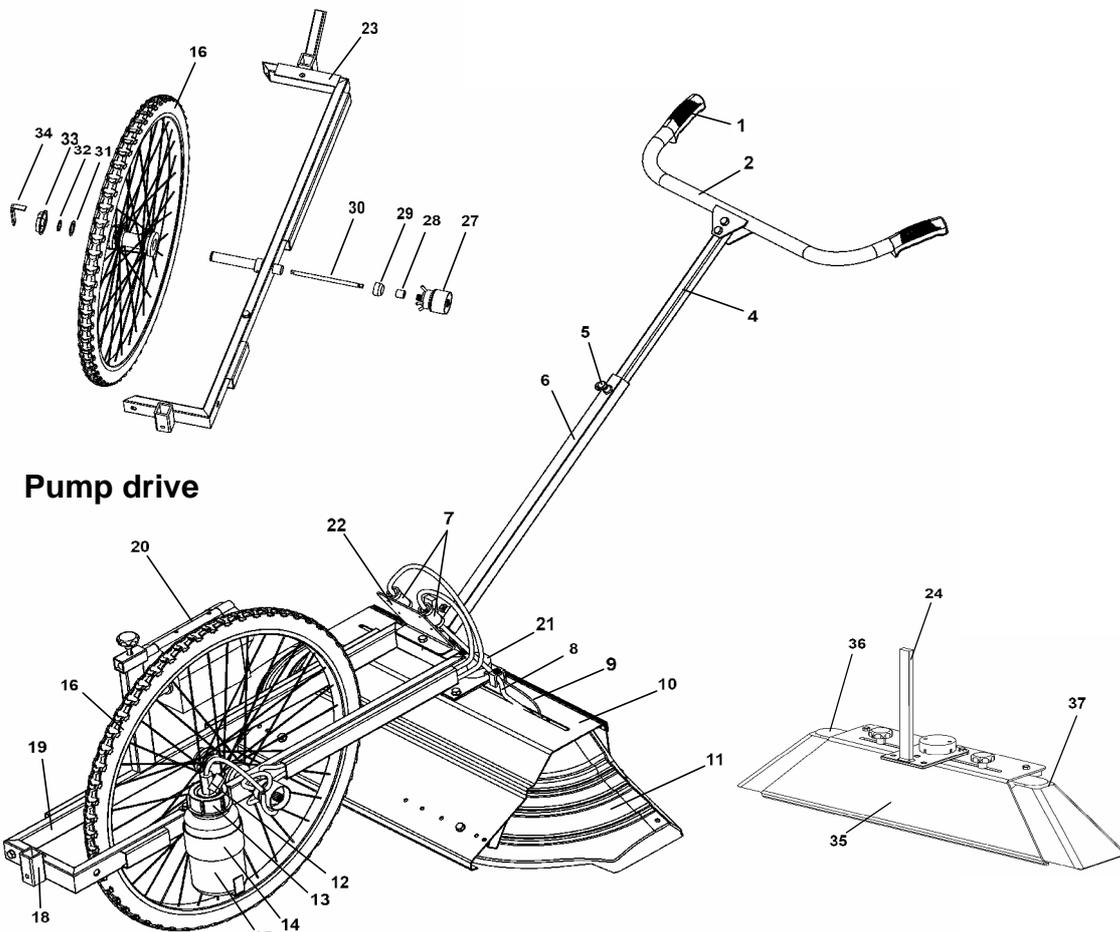


## Pump drive

### Part Art. No. Designation

**102490 MANKAR-GP 60-80**

**100526 MANKAR-GP 70-110**


1	100349	Rubber hand grip for MANKAR
2 + 3	101272	Handle bar for MANKAR
4	100419	Handle bar extension, MANKAR GP
5	100990	Hexagon screw M 8 x 20 mm stainless steel
6	100429	Connection for handle bar extension MANKAR GP
7	100397	Flow rate controller, complete, for all MANKAR units, without holder
8	- - - -	Pressure hose 4 x 2 mm
9	100388	Cable, Atomiser cable, Mankar/Flex/Var/Mafex
10	100363	Sheet metal skirt, 600mm for spray hood 70 - 110 cm
11	100400	Spray hood, split, 25 cm wide, left for spray hood 70 - 110 cm
	100426	Spray hood, split, 25 cm wide, right for spray hood 70 - 110 cm
12	100390	Ball valve 1/4" i/i
13	100441	Tank lid, 1 L with hole for MANKAR units
14	102589	Tank holder for MANKAR GP
15	100434	Tank 1 L, MANKAR, without lid
16	100395	Wheel with bearing bush, 560 mm for MANKAR GP
18	100556	Pump carrier for MANKAR-110 GP
19	100558	criss beam with attachment bracket for powerpack, MANKAR GP
20	100459	Powerpack with 1 battery, 6 V - 7 Ah, for MANKAR
21	100379	Strain relief cover for spray hood 70-110 cm
22	100440	Holders for 2 flow rate controls, MANKAR GP
23	102491	Attachment bracket for spray hood MANKAR GP
24	100360	Height adjustment for spray hood MANKAR GP
25	100381	Clamping strip for rubber skirt, spray hood 70 - 110 cm, MANKAR
26	100380	Rubber skirt for spray hood 70-110, MANKAR
27	100527	Metering pump MANKAR-3, capacity 5 - 12 ml/min for MANKAR-110 GP
28	100392	Pump threaded sleeve for MAFEX / MANKAR pumps
29	100377	Retaining collar 20.5 mm for wheel axle, MANKAR and mounted units
30	100393	Cardan shaft, MS, for MANKAR units
31	100457	Adjusting washer 20x28x1 mm for pump drive
32	100394	Retaining ring A 20 for pump carrier, MANKAR / FLEXOMANT
33	100375	entrainer disk for MANKAR units
34	101718	angle for entrainer disk, MANKAR GP
35	101096	Spray hood 60-80 cm complete for MANKAR-110 GP with 2 atomisers and height adjustment
36	102551	Spray hood, 30cm with guide rail, left for spray hood 60-80cm
37	102552	Spray hood, 30cm with guide rail, right for spray hood 60-80cm

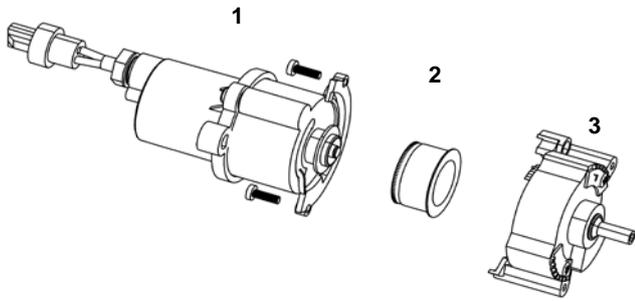

**Part Art. No. Designation**

**100320 Atomiser for MANKAR**


1	102417	Motor module for segmental atomiser MANKAR
2	100478	Atomiser disc for segmental atomiser
3	101996	Segment module for segmental atomiser

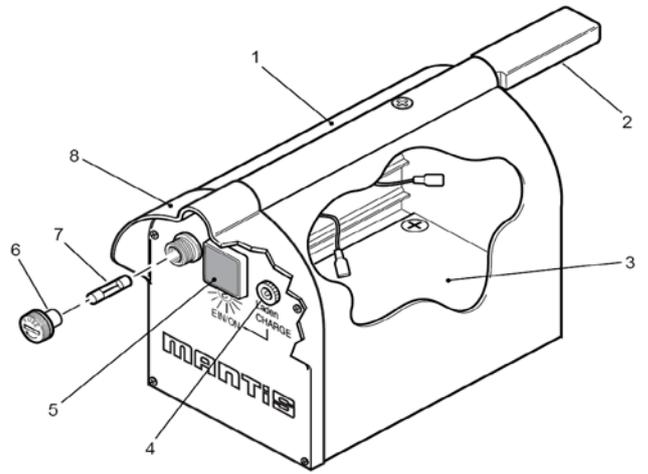

**Part Art. No. Designation**

**100459 Powerpack with 1 battery, 6 V - 7 Ah, for MANKAR-P models  
102312 Powerpack with 1 battery, 6 V - 7 Ah, for MANKAR-GP models**

1	100469	Powerpack housing
2	100461	Clamping rail, round milled for MANKAR P powerpack
2a	101858	Clamping rail, round milled for MANKAR GP powerpack
3	100450	Battery 6 V - 7 Ah
4-8	101565	Cover for MANKAR powerpack, assembled
4	100693	Low voltage plug adapter
5	100464	Switch, green illumination, square, for powerpack and control box
6	100365	Fuse holder, complete for MINI-MANTRA / MANKAR FLEXOMANT / ...
7	100730	Glass fuse 5X20 T 3.15A
8	100466	Powerpack cover

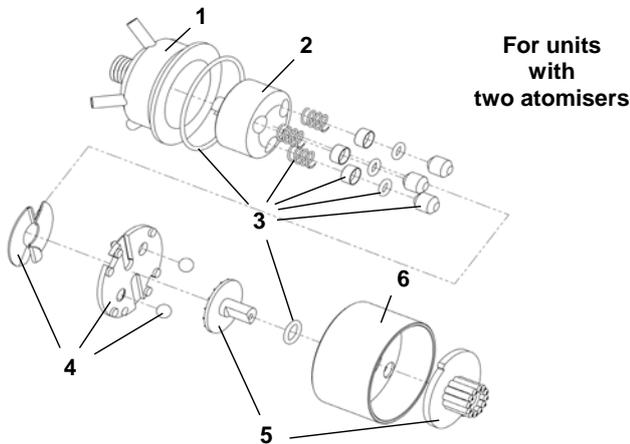


**For units with two atomisers**

**Part Art. No. Designation**

**100522 Metering pump MANKAR-3, capacity 5 - 10 ml/min**

1	100528	Housing, pump housing, MS for MANKAR
2	102209	Rotor-3, MS for piston pumps MAFEX / MANKAR
3	102373	Sealing set for MANKAR/MAFEX-3 metering pump
4	101626	Repair set, MANKAR metering pump, pressure plate/wobble plate
5	102429	Repair set, MANKAR metering pump, metering adjustment knob/selector disc
6	100534	Cover for piston pump

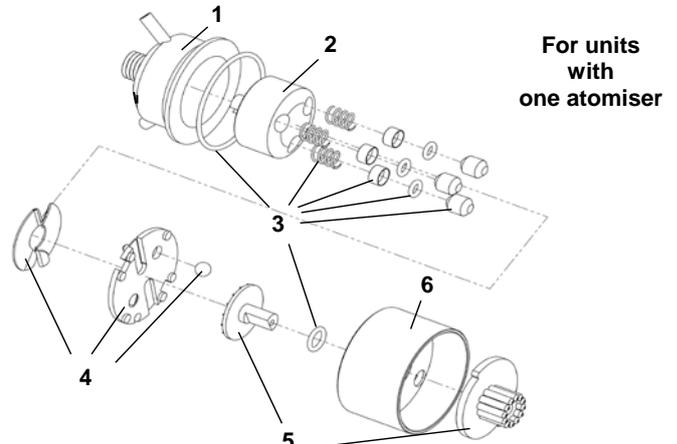

**For units with one atomiser**

**Part Art. No. Designation**

**100492 Metering pump MAFEX-3, capacity 2 - 20 ml/min**


1	100493	Housing, pump housing, MS for MAFEX
2	102209	Rotor-3, MS for piston pumps MAFEX / MANKAR
3	102373	Sealing set for MANKAR/MAFEX-3 metering pump
4	102436	Repair set, MAFEX metering pump, pressure plate/wobble plate
5	102437	Repair set, MAFEX metering pump, metering adjustment knob/selector disc
6	100534	Cover for piston pump

**Dosierpumpe MANKAR  
Metering pump MANKAR  
Pompe doseuse MANKAR**

**Dosierpumpe MAFEX  
Metering pump MAFEX  
Pompe doseuse MAFEX**

**Druckseite  
Pressure sleeve  
Pression**


**Saugseite  
Sucking sleeve  
Aspiration**

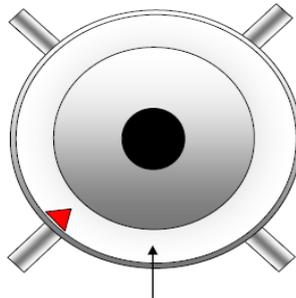

**Saugseite**

**Druckseite  
Pressure sleeve**

**Druckseite / Pressure sleeve / Pression**

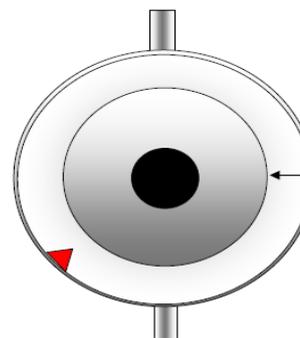


**DOSIERKNOPF  
METERING  
ADJUSTMENT KNOB  
RÉGLAGE DE DÉBIT**

## Troubleshooting

Fault occurrence	Cause	Rectification
<b>Atomiser disc not rotating</b>	Atomiser contaminated Battery empty Fuse blown  No electrical contact Battery defective Atomiser motor defective	Thoroughly clean atomiser, remove plant parts as necessary Charge battery Replace fuse on powerpack (Replacement fuses are located in the powerpack housing) Check cable or connector contact Install new battery Install new motor Connect the brown cable to Plus (+).
<b>Atomiser spray one-sided</b>	Rotation disc turning in the wrong direction	Connect cable correctly! Selectively plug the brown cable onto the contact pin on the switch/valve unit. Connect the blue cable via the round pin plug. Check to ensure the battery connection to the powerpack is correctly poled, blue cable to Plus (+).
<b>Atomiser spray too wide</b>	Width adjustment improperly set	Loosen screws (F, see page 3) and correctly adjust the left or right width settings.
<b>Atomiser drips</b>	Metering valve incorrectly set Atomiser disc defective / contaminated Atomiser spray discharge contaminated	Check setting, see table Replace / clean disc Clean
<b>Atomiser foams</b>	Residual water in system	Completely empty container, hose, segmental atomiser.
<b>Air in hose line</b>	Hose connection  / Filter leaking	Shorten the hose slightly and set onto the hose nipple. Re-tighten the screw on the filter.

## Metering pump does not draw

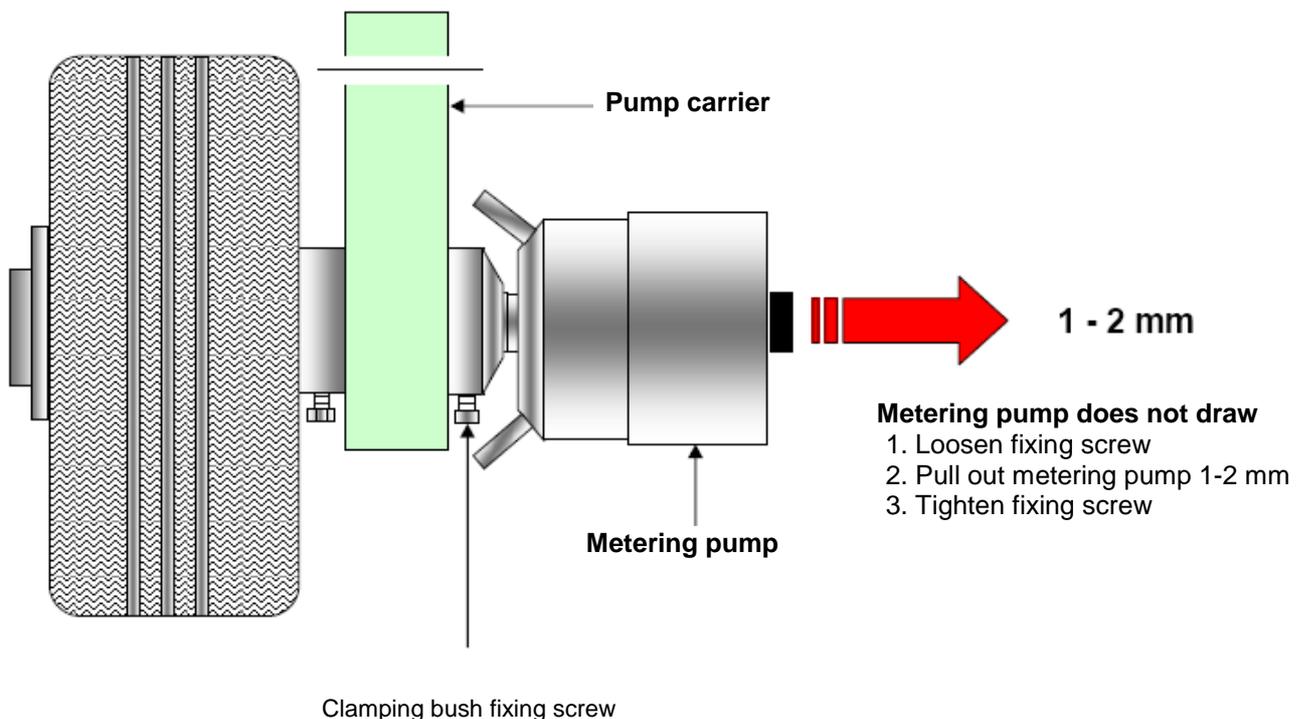

## **GUARANTEE**

- I. If the purchase is a commercial transaction for both sides, the Customer must examine the goods immediately on receipt, as far as this is possible during the regular course of business and if there is a defect, inform the Vendor immediately.
- II. If the Customer does not make a complaint, the goods are considered approved, unless there is a defect, which was not visible during the examination. Furthermore §§ 377 ff. HGB applies.
- III. The Vendor may choose to eliminate the defects or deliver an item free of defects, (rectification of defects). If the rectification of defects fails, the Customer has the right to choose to either demand a reduction in price or to withdraw from the contract.
- IV. Further claims from the Customer, in particular due to consequential damage caused by a defect are in principle disqualified. This does not apply in cases of intent, gross negligence or breaches of contract by the Vendor as well as in cases of injury to life, body or health. The right of the Customer to withdraw from the contract remains unaffected.
- V. Warranty claims lapse after 24 months, respectively after 12 months in case of commercial use of the goods. The limitation period begins at delivery. The guarantee expires, if the delivered goods change or are handled incorrectly.
- VI. The Vendor is not responsible for material defects on deliveries, which he sources from third parties and forwards unchanged to the Customer. Responsibility in the case of intent or negligence remains unaffected. The preceding regulations do not imply a change to the burden of proof to the disadvantage of the Customer.
- VII. Claims for defects do not only exist in cases of negligible deviations from the agreed properties and conditions or only in negligible impairment of usefulness.
- VIII. Necessary expenses for the purpose of the rectifying defects are to be paid by the Customer, if they increase due to delivery to a different place than the place of business of the Customer, unless the transport corresponds to its intended use.

## **EG-Declaration of conformity Council Directive 2006/42/EG**

Mantis ULV-Sprühgeräte GmbH, Vierlander Straße 11 a, 21502 Geesthacht declare under our sole responsibility that the following products are in conformity with the provisions of the following Council Directive: 2006/42/EG

Typ	MANKAR-ONE, MANKAR-TWO
Typ	MANTRA, MINI-MANTRA / PLUS, MICRO-MANTRA, MICRO-VASO, MANKAR HQ
Typ	FLEXOMANT-1W, FLEXOMANT-2W, FLEXOMANT-3W, FLEXOMANT-4W, FLEXOMANT-PLUS, VARIMANT-1, VARIMANT-2, VARIMANT-4 PLUS, VARIMANT-WINNER-TOP, VARIMANT-WINNER-UNO
Typ	MAFEX
Typ	ROFA

Hiske Weissmann  
Managing Director



\_\_\_\_\_

Geesthacht January 2015

\_\_\_\_\_  
(Place and date of signature)

\_\_\_\_\_  
(Name, title and signature)